



Installation Instructions and Warranty


Parts Included

1. One Aluminum Canister with Polyester Screen (PART **(A)**)
2. Two Shower Rails (PART **(B)**)
3. Two End Caps (PART **(C)**) attached to One Side Extrusion (Wall Jamb)(PART **(D)**)
4. One Screw (#8 x 3/4" Pan Head Tek SS) To secure (PART **(B)**) to Wall Jamb (PART **(D)**)


Tools Required



Level

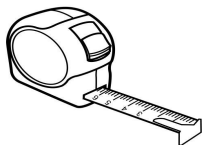


Tape Measure

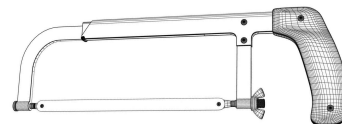


Metal Handsaw



Caulk

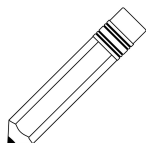

Pencil



Screwdriver &
Assorted Driver
Bits



Drill & Assorted
Drill Bits

Before Installation:

1. Clean Surface
2. Measure wall to wall both top and bottom to make sure they are equal (1/4" difference per side allowed). If more than 1/4" attach double-sided foam tape behind part of the shower screen frame to adjust.

https://www.youtube.com/watch?v=s6uX_I8CEOw&t=2s




Nautilus Retractable Shower Door—Installation Instructions

www.nautilusretractable.com

Made by Stoett Industries, Inc.—Toll Free: (800) 431-2986 // Local Phone: (419) 542-0247 // Fax: (419) 542-0255

600 Defiance Ave., Hicksville, OH 43526

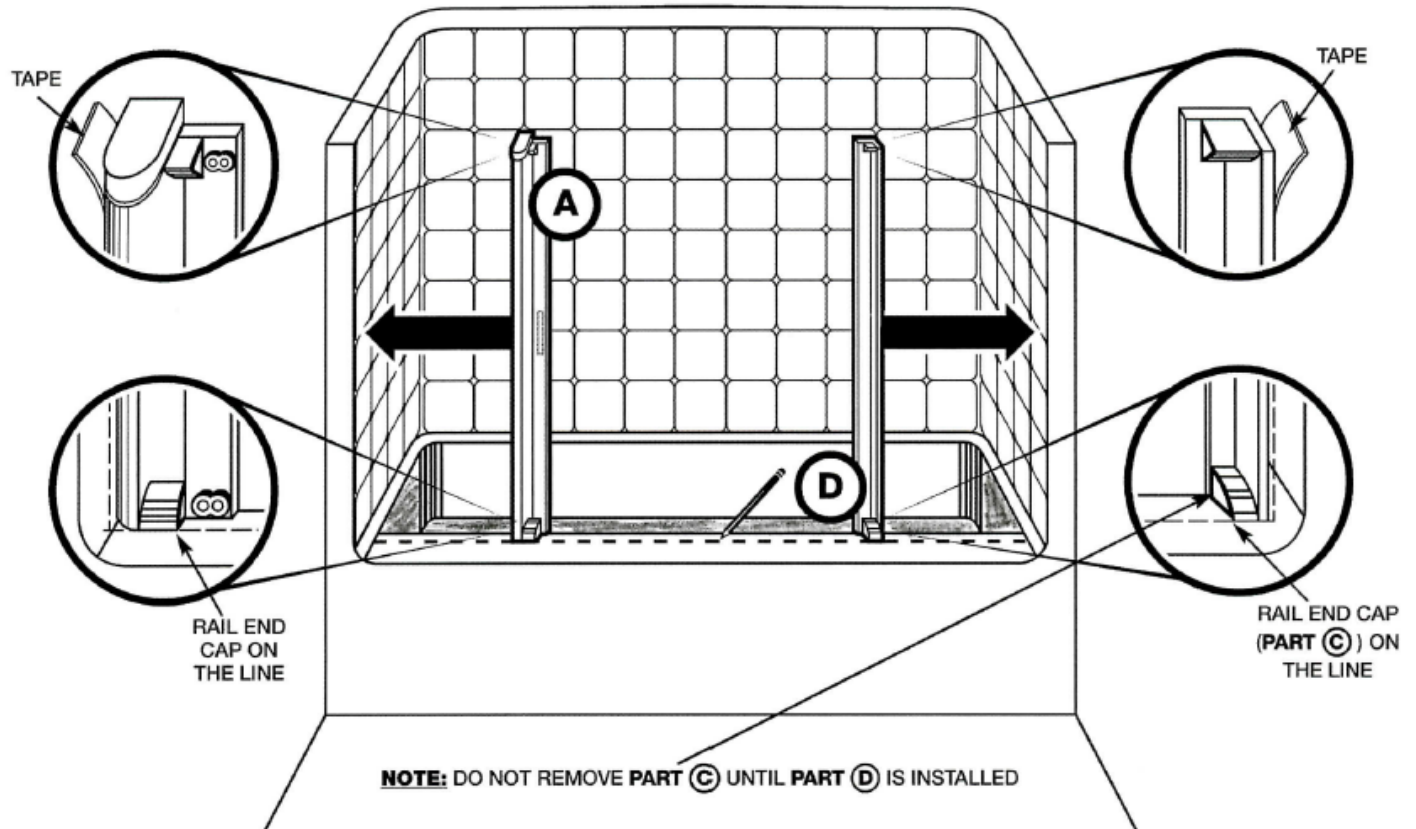

STEP ONE: Install Canister (A) and Extrusion with End Caps (D)

1. Draw a straight line along tub edge where you would like to position your rail.
2. Place (A) on left or right side of shower with handle facing outward (HANDLE IS THE LATCH DEVICE). Position the rail end cap at the edge of your pencil line. Use a level to ensure (A) is vertical. Peel off tape from (A) as shown, and press firmly against wall.
3. Position (D) with the lower rail end cap (C) at the edge of your pencil line. Use level to ensure (D) is vertical. Peel off tape from (D), and press firmly against wall.

https://www.youtube.com/watch?v=s6uX_I8CEOW&t=2s




Nautilus Retractable Shower Door—Installation Instructions

www.nautilusretractable.com

Made by Stoett Industries, Inc.—Toll Free: (800) 431-2986 // Local Phone: (419) 542-0247 // Fax: (419) 542-0255

600 Defiance Ave., Hicksville, OH 43526

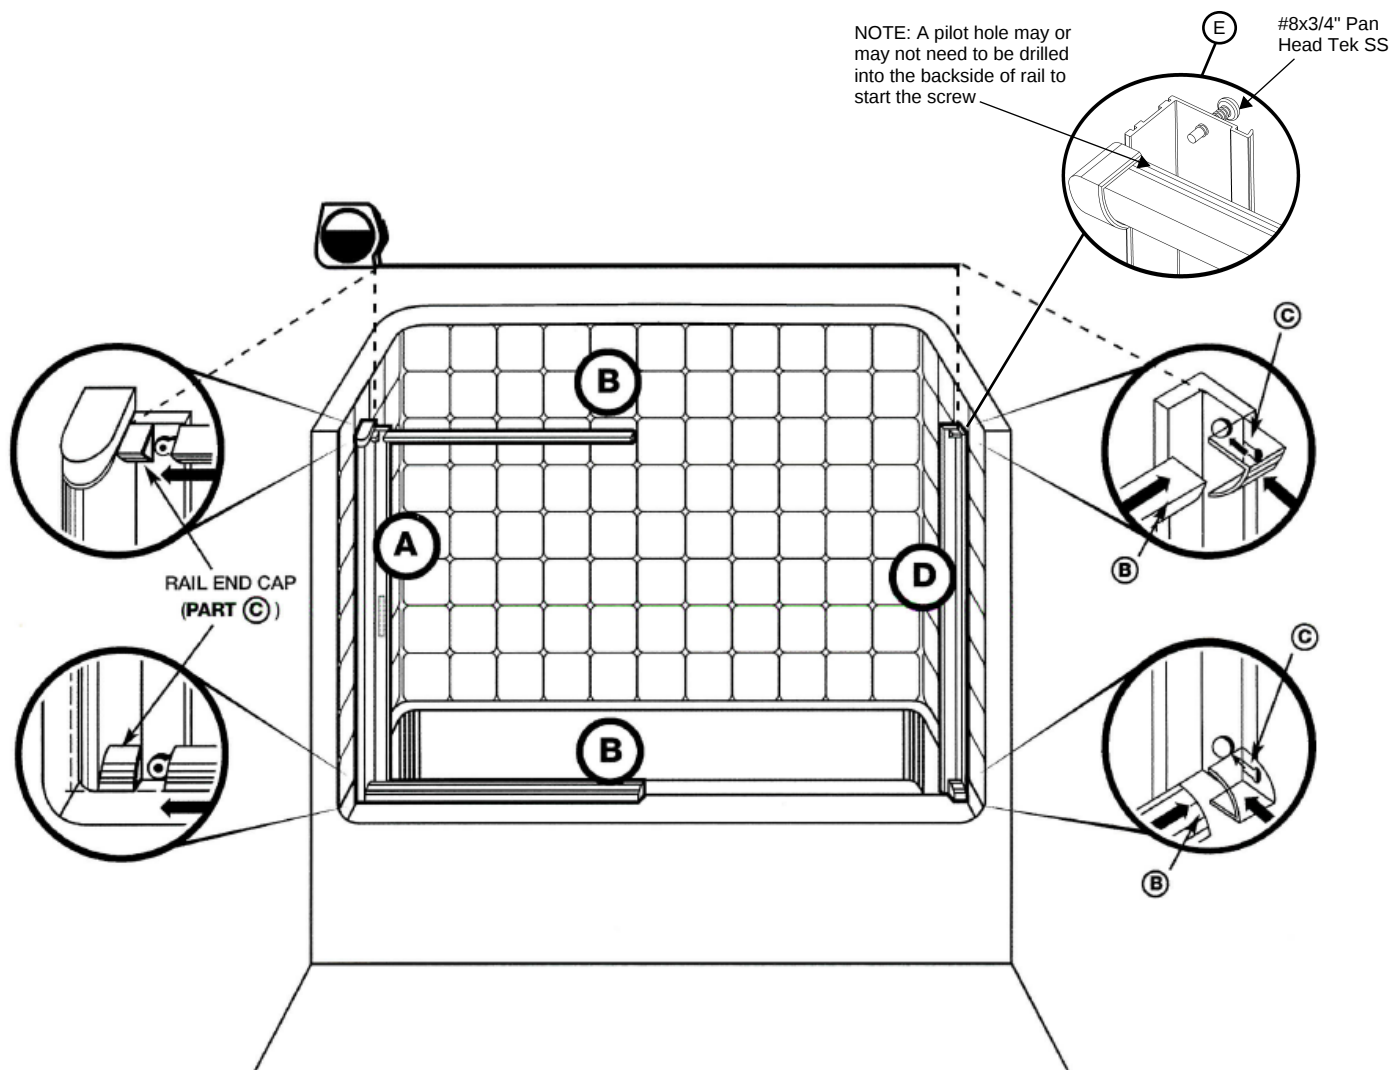

STEP TWO: Install Rails (B)

1. Measure the distance between (A) and (D) for the UPPER and LOWER rails **separately**, and deduct 1/4". Transfer measurement to each (B), and cut to measured lengths.
2. Slide the upper slider () inside the track, and push (B) into the rail end cap. Unclip the UPPER rail end cap (C) from (D), place (C) on to (B), and clip it back in place.
3. Repeat for LOWER rail (B)
4. Reference Drawing (E) Install screw through (Wall Jamb)(PART (D)) into first wall of the (Rail)(PART (B))

(This needs to be installed on the upper Rail for added strength and support)




https://www.youtube.com/watch?v=s6uX_I8CEOW&t=2s

Nautilus Retractable Shower Door—Installation Instructions

www.nautilusretractable.com

Made by Stoett Industries, Inc.—Toll Free: (800) 431-2986 // Local Phone: (419) 542-0247 // Fax: (419) 542-0255

600 Defiance Ave., Hicksville, OH 43526

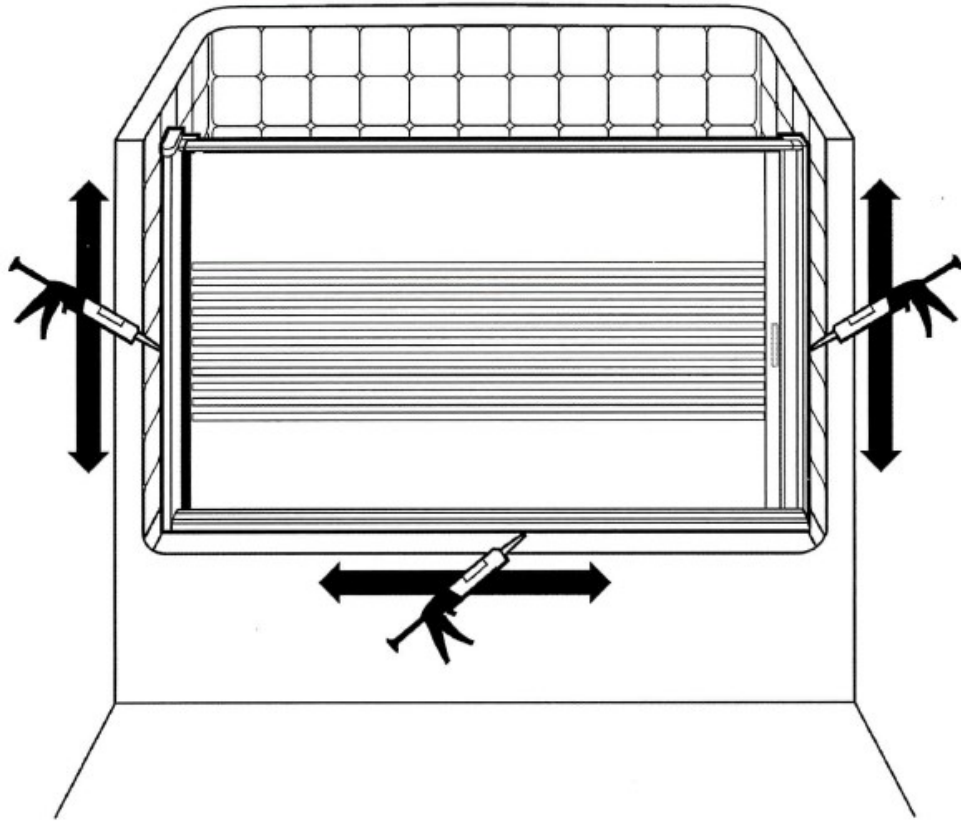

STEP THREE: Caulk

1. Caulk the exterior perimeter of the Nautilus Screen. Allow caulk to dry.



https://www.youtube.com/watch?v=s6uX_I8CEOw&t=2s

Nautilus Retractable Shower Door—Installation Instructions

www.nautilusretractable.com

Made by Stoett Industries, Inc.—Toll Free: (800) 431-2986 // Local Phone: (419) 542-0247 // Fax: (419) 542-0255

600 Defiance Ave., Hicksville, OH 43526

WARRANTY

Limited Warranty for Nautilus® Screens

WHAT IS COVERED AND FOR WHAT PERIOD THE COVERAGE EXTENDS

Stoett Industries Inc. (hereafter "Stoett") warrants to the original purchaser of this product, living in THE UNITED STATES OF AMERICA, who purchased their Nautilus® Screen from a Nautilus® Screen authorized distributor or dealer:

- a. that this product, including all of its Nautilus® Screen authorized components, is free of defects in materials and workmanship.
- b. that this product, if found to be defective within the stated warranty period, will be replaced, or repaired (at the discretion of Stoett) free of charge to the consumer, provided the failure is reported directly to Stoett and an original receipt, showing original purchase from authorized distributor/dealer is presented at the time of claim date.

The warranty period is one (1) year from the date of purchase. The warranty applies to residential usage only. If the item seems to have been used otherwise to Stoett, thereafter, this limited warranty shall be null and void. Also, if proof of original purchase cannot be provided this limited warranty shall be null and void.

WHAT IS NOT COVERED BY THIS WARRANTY

This warranty does not cover damage or defects caused by, or resulting from repairs, services or alterations to the product or any of its parts or components which have been performed by service or repair centers not authorized by Stoett, damages or defects caused by negligence, improper installation, accident, abuse, misuse, or improper maintenance of the product, its parts and components. Ordinary wear and tear shall not be considered a defect in product or materials.

The full extent of Stoett Industries Inc.'s obligation under this warranty is restricted to the supply of replacement components or refund of original purchase price to be determined at the absolute discretion of Stoett Industries Inc. This warranty does not include labor or other costs associated with the removal or installation of replacement parts. Stoett reserves the right to inspect and test products to determine the validity of any claim made under this warranty.

LIMITATION OF LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES

Stoett specifically disclaims any and all liability, whether directly or by way of indemnity for special, incidental or consequential or other damages, whether based on breach of contract, tort, strict of product liability, or other damages, or any other legal theory.

ATTACH ORIGINAL RECEIPT TO THIS WARRANTY FOR VALIDATION.



https://www.youtube.com/watch?v=s6uX_I8CEOw&t=2s

Nautilus Retractable Shower Door—Installation Instructions

www.nautilusretractable.com

Made by Stoett Industries, Inc.—Toll Free: (800) 431-2986 // Local Phone: (419) 542-0247 // Fax: (419) 542-0255

600 Defiance Ave., Hicksville, OH 43526